

Springs for: -

	Symbol No.	Ref. Mark.	No.off.
Main engine fuel valves	Z16D2-15	17/64x320	1
Fuel valve levers	Z24D2-4	4/18x108	1
Starting air inlet & outlet valves	Z36D4-12	9/39x208	1
Starting air valve piston	Z28D4-20	13/73x430	1
" " " "	Z28D4-21	9/48x418	1
" " " " rod	Z28D4-26	0.68/10.5x26	1
" " " "	Z28D4-33	9/60x178	1
Packing rings for scavenge pump) stuffing box)	Z55D10-9	1.4/8.6x442	1
Scavenge pipe door	Z34D12-14	7.5/23x90	1
Packing rings for L.P.comp.) stuffing box)	Z48D12-10	1.4/8.6x308	1
Fuel pump suction valves	Z23D2-19	1.8/15.5x31.4	6
" " discharge valves	Z23D2-20	2/5.5x36	6
W.S. Stauffer lubricator	Z15D2-48	0.9/4.5x9	1
W.S. Wiper rings	Z15D2-44	.75/4.5	1
Regulating valves	Z26D10-25	1.6/14x37	1
" valve tappets	Z26D10-28	2.1/18x48	1
Main scavenging pump disch.vl.seats	Z34D44-7)		
" " " " " " " " " " " "	Z34D42-7)	0.8/9x18	24
on return valve for fuel inlet) at fuel valve)	Z16D4-4	1.4/4.5x20	1
Release valve operating gear	Z25D6-35	6.6/36x320	1
Compression release valve	Z18D2-17	3.1/20x35	1
Manoeuvring gear lever	Z26D8-14	1.0/10.5x74	1
Scavenging pump suction and) delivery valves)	Z55D12-8	1.1/14.8x32	24
Main engine cylinder safety valves	Z18D2-1	11/32x200	1
Main engine governor	Z23D2-221	16/67x200	1
Fuel pump plungers	Z23D2-191	7.5/60x166	1
Coupling pins for fuel pump drive	Z23D2-206	3.4/14.6x88	1
L.P. compressor suction valve	Z48D2-11)		
L.P. " " " "	Z48D8-8)	2.5/45.5x62.5	7
L.P. " " " "	Z48D4-11)		
L.P. " " " "	Z48D10-13)	2.75/64.5x67	7

	Symbol No.	Ref. Mark.	No.off.
P. compressor discharge valve	Z48D2-20)		
" " "	Z48D8-17)	4.15/45.5X38	8
" " "	Z48D4-20)		
" " "	Z48D10-22)	3.4/64.5X86	8
specion doors on compr.framing)	Z47D6-6	1.8/16X30	1
" " " splashplates)			
" " " pump lever casing	Z33D20-10	1.8/16X45	1
indicator gear	Z29D6-2	3.75/32.5X165	1
" "	Z29D6-9	1.5/11X36.5	1
return valve for cyl. lubn.	ZDL56-1	0.75/4.5X16	4
uffing box for pump lever casing	Z33D20-20	1.2/5.5X270	1
ot. & disch. valves for lubg. pump	Z33D18-34	1.829/25X32	20
return valve in connecting rod	Z9D2-29	1.4/11X27	1
bricator driving gear	Z23D12-9	3.658/36.342X232	1
ster starting air valve)			
control lever)	Z28D6-33	1/10.5X74	1
tercooler water space safety)			
valve)	ZDC96-3	6.1/28X99	1
P. intercooler air space)			
safety valve)	ZDA72-3	4.9/17X79	1
do. do.	ZDA70-3	8/32X128	1
ection air shut off valve	ZDA90-12	4.55/21X113	1
" " control "	ZDA28-15	5.1/28X85	1
" " bottle safety valve	ZDA80-42	6/17X76.25	1
. intercooler air space)			
safety valve)	ZDA68-3	6.1/32X126	1
ersing engine air cylinder)			
safety valve)	ZDA24-3	2.75/12X44	1
ief valve on lubg. oil pump	ZDL58-5	6.4/32.6X167	1
return valve in scavenge)			
pump conn. rod)	Z55D6-29	1/10X20	1
return valve in compr.)			
conn. rod)	Z48D20-29	1/10X20	1
ersing engine air cylinder)			
safety valve)	ZDA14-3	2.75/12X46	1
ection air non return valve	Z16D6-2	4/19X35.5	1
" " " " "	Z16D6-7	16.1/17X76.25	1

	<u>Symbol No.</u>	<u>Ref. Mark.</u>	<u>No.off.</u>
Relief valve for jacket cooling) pump	ZDC122-1	12.7/89X305	1
Relief valve for sanitary pump	ZDC124-1	14.3/89X305	1
" " " piston cooling pump	ZDC126-1	8/57X210	1
Escape valve for starting air) valve housing	ZDA122-3	7/32X131	1

