

- 1 Cylinder complete with studs and nuts.
- 1 Cylinder extension piece complete with studs and nuts.
- 4 1" studs and nuts for main bearings.
- 1 Main bearing brass (lower)
- 1 Main bearing brass (upper)
- 1 Crankshaft
- 10 Piston rings
- 2 Scrape rings
- 3 Inlet and exhaust valve chests complete with valves and springs
- 1 Fuel valve chest compl., without valve and atomizer
- 2 Fuel valves
- 1 Atomizer
- 1 Flameplate
- 1 Starting air valve chest, compl. with valve and spring
- 1 Starting air valve
- 1 Spring for starting air valve
- 1 Spring for fuel valve
- 3 Springs for fuel pump valves
- 1 Spring for inlet valve lever
- 1 Spring for starting gear valve lever
- 2 Copper packing rings
- 4 Copper packing rings
- 2 Crankpin bearing bolts with nuts and set pins
- 1 Piston pin brasses bolt with nut and set pin
- 1 Set crankpin brasses compl.
- 1 Set piston pin brasses
- 1 Inlet valve lever complete with roller and pin
- 1 Fuel valve lever complete with roller and pin
- 1 Starting air valve lever compl. with roller and pin
- 1 Exhaust valve lever complete with roller and pin
- 1 Auxiliary exhaust valve lever complete with roller and pin
- 4 3" valves with housings and springs for L.P. and I.P. air compressor
- 20 Set 3" valves for L.P. and I.P. air compressor
- 1 Suction valve housing with spring
- 1 Delivery valve housing with spring
- 10 Valves for H.P. air compressor
- 12 Piston rings L.P. air compressor
- 12 " " I.P. "
- 12 " " H.P. "
- 1 Rubber packing ring for cyl. extension piece
- 1 " " " " " "
- 1 " " " " starting air valve housing
- 1 " " " " escape valve housing
- 1 Set crankpin brasses compl. for air compressor
- 1 Set crankheadpin " " " "
- 2 Crankpin bearing bolts with nuts
- 1 Crossheadpin brasses bolt with nut and set for air compressor
- 1 Crossheadpin for air compressor
- 20 Cooler tubes \varnothing 9/12 long 965 mm.
- 3 Fuel pump valves
- 2 Fuel pump plungers
- 1 Escape valve compl. with housing and spring.

Fam

