

For 3 sets

SPARE GEAR.

ENGINE SPARES :—

	2 Cyl. Engine	3 Cyl. Engine	4 Cyl. Engine
Connecting rod bottom end bolts and nuts	2	2	2
Main bearing studs and nuts . . .	2	2	2
Piston ring, set for 1 piston . . .	1	1	1
Valves with casings complete, fuel . . .	1	1	2
„ „ „ exhaust . . .	2	2	2
„ „ „ air starting . . .	1	1	1
Fuel valve spindles	1	2	2
„ „ „ pulveriser rings, set for 1 valve . . .	1	1	1
„ „ „ roller	1	1	1
Fuel pump plunger	1	1	1
„ „ „ suction valve	1	1	1
„ „ „ delivery valve	1	1	1
Filter cartridge (fuel oil)	1	1	1
„ „ „ (lubricating oil)	1	1	1

AIR COMPRESSOR SPARES :—

Valves, suction and delivery	1 set	1 set	1 set
Piston rings	1 set	1 set	1 set
Cooling Coils, for each type fitted . . .	1	1	1

SPRINGS :—

For inlet or exhaust valves	2	3	4
For each Air Compressor suction & delivery valve	2	2	2
For each spring fitted other than those mentioned above	1	1	1

GENERAL :—

Rubber rings for Cylinder liners, for each fitted	1	1	1
„ „ „ for Exhaust Valve boxes, for each fitted	4	4	4
„ „ „ for Compressor Mantle, for each fitted	4	4	4
Wacking for Fuel Valve Spindle	} Sufficient to replace once		
„ „ „ Fuel Pump Plungers			
Glass for Sight Feed Lubricators, for each size fitted	1	1	1