

No. 1352.

LIST OF SPARE GEAR FOR MAIN ENGINE.

Motor Vessel Jeany. 1252 SHW<sup>N<sup>4</sup></sup>  
1325

PART.	DETAIL No.	DWG. No.	No. off.
<u>Working cylinder cover complete</u> <u>with all valves, valve seats,</u> <u>springs etc. fitted to it.</u> <u>Comprising :-</u>			
(a) Cylinder cover (top part) complete with studs & nuts.	HP6Y-B100	HPB104	1
Rubber rings 740 x 7		HPB104	2
Sine plugs		HPB104	6
Fibre washers for plugs 44 x 53 x 2		HPB104	6
(b) Cylinder cover (bottom part) complete with studs and nuts	HP6Y-B110	HPB105	1
Rubber rings 280 x 7		HPB105	4
Copper washer 80.5 x 95 x 1.5		HPB105	1
Copper washer 51.5 x 59 x 0.5		HPB105	1
Casing for fuel valve	HP6Y-B102	HPB106	1
Rubber ring 135 x 5		HPB106	1
Rubber ring 98 x 5		HPB106	1
(c) Fuel Valves :-			
Housing complete with studs & nuts	HP6Y-B400	HPB402	1
Filling up pin	HP6Y-B405	HPB402	1
Plug	HP6Y-B408	HPB402	1
Copper joint for air inlet 38 x 48 x 1.5		HPB402	1
Copper joint for stuffing box 62.5 x 74.5 x .5		HPB402	1
Copper joint for sprayer 16 x 48 x 0.3.		HPB402	1
Copper joint for pulverizer 34 x 55 x 3		HPB402	1
Copper joint for fuel inlet 7.5 x 18 x 1.5		HPB402	1
Stud couplings for water inlet and outlet.		HPB402	2



PART.	DETAIL No.	ENG. No.	No. off.
Fibre washers for couplings		MPB402	2
Fuel valve spindle	MP6Y-B401	MPB403	1
Distance piece	MP6Y-B406	MPB403	1
Stuffing box	MP6Y-B407	MPB403	1
Gland	MP6Y-B2509	MPB403	1
Nut	P4Y-B408	PB411	1
Bridge	P4Y-B401	PB410	1
Spring guide	P4Y-B409	PB411	1
Cap for spring dome	P4Y-B414	PB411	1
Spring dome	P4Y-B413	PB411	1
Top spring holder	P4Y-B415	PB411	1
Bot. spring holder	P4Y-B416	PB411	1
Set bolt and nut	H.1327	PB411	1
Loose collar	P4Y-B434	PB409	2
Spring	16/64x289	O.1317	1
Atomiser	232 H.	PB409	1
Sprayer	287BR	PB409	1
Sprayer nut	287BR	PB409	1

(a) Fuel Delivery non-return Valve.

Non-return valve body	MP6Y-B409	MPB404	1
Plug	H.928	H.901	1
Copper joint 22 x 27 x 1.5		MPB404	1
Priming valve	MP6Y-B410	MPB404	1
Handwheel	MP6Y-B411	MPB404	1
Non-return valve	36K-H103	MPB404	1
Spring	1.4/4.5x20	O1317	1

(a) Safety & Compression Release Valves.

Safety valve housing	MP6Y-B700	MPB704	1
Safety valve spring case	MP6Y-B723	MPB704	1
Copper joint ring for seats 34 x 44 x 0.5		MPB704	2





PART.	DETAIL No.	DRG. No.	No. off.
Spring for safety valve	11/32 x 200	0.1317	1
Safety valve spindle & pin	HP6X-B720	HPB705	1
Safety valve	HP6X-B721	HPB705	1
Safety valve seat	HP6X-B722	HPB705	1
Safety valve spring cap	HP6X-B724	HPB705	1
Compression release valve housing	P4X-B700	PB700	1
Compression release valve spindle & nut	P4S-B701	PB700	1
Compression release valve spring cap.	P4S-B702	PB700	1
Compression release valve spring	3.1/32 x 35	0.1317	1

#### Indicator Valve.


Gland nut	St-D609	STD.600	1
Hand wheel fastening & screws	St-D610	STD600	1
Handwheel.	St.D611	Std600	1
Valve body	St.D612	STD600	1
Adaptor	St.D613	STD600	1
Stuffing box	St.D614	STD600	1
Spindle valve	St.D615	STD600	1
Gland	B526/11	STD600	1

Copper joint for valve 14 x 27 x 1.5		STD600	1
---	--	--------	---

Copper joint for adaptor 20 x 31 x 1.0		STD600	1
---	--	--------	---


Working cylinder piston complete  
with rings, pins & nuts.  
Comprising :-

Piston head complete with studs and nuts	HP6X-A507	HFA501	1
Piston rings 600 x 11.9 x 17			5
Wearing rings	HP6X-A510	G-6591-A	2
Piston skirt	HP6X-A501	HFA501	1
Skirt rings 600 x 13.9 x 17			3

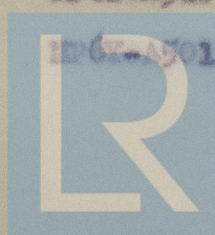



PART.	Detail No.	DRG. No.	No. off
<u>rear wheel of each</u>			
<u>using :-</u>			
shaft wheel	HP6Y-C120	HPG109	1
ical shaft wheel	HP6Y-C121	HPG109	1
entric shaft wheel	HP6Y-C122	HPG109	1
<u>Connecting rod Spares.</u>			
<u>using :-</u>			
end top half	HP6Y-A404	HPA405	1
nd bottom half bushes	HP6Y-A405	HPA405	2
end bolts and nuts	ST-A327	STA301	2
om end top half	HP6Y-A407	HPA404	1
om end bottom half	HP6Y-A408	HPA404	1
om end bolts & Nuts	ST-A360	STA302	2
s between top & bott. halves	HP6Y-A409	HPA404	2 sets
s between conn. rod foot and t. end.	HP6Y-A401	HPA406	3
<u>esser Connecting Rod Spares</u>			
<u>using :-</u>			
end bolts and nuts	ST-A249	STA202	2
om end bolts & Nuts	ST-A280	STA202	2
s between conn. rod foot bott. end.	HP6Y-F607	HPF601	5
<u>Bearing Spares.</u>			
<u>using :-</u>			
om halves -			
e to suit bridge 370 wide.			
e to suit bridge 370 ".05	HP6Y-A103	HPA112	2
om halves -			
e to suit bridge 370 wide.			
e to suit bridge 370 ".05	HP6Y-A120	HPA113	2
ds and nuts	HP6Y-A106	HPA115	2
<u>engor Main Bearing Spares</u>			
<u>using :-</u>			
ds & nuts	HP6Y-A126	HPA115	2
<u>ing Bolts.</u>			
<u>using :-</u>			
n engine crank shaft bolts & nuts.	HP6Y-A800	HPA803	8

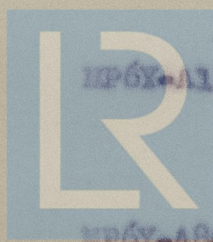



PART	DETAIL No.	DRG.No.	No. off.
<u>1 Pump complete for one Cylinder.</u>			
<u>rising:-</u>			
Plunger	MP6Y-B200	MPE.201	1
Guide block	MP6Y-B201	MPE201	1
Guide block pin	MP6Y-B203	MPE201	1
Plunger guide	MP6Y-B208	MPE201	1
Spring cap	MP6Y-B211	MPE204	1
eccentric shoe	MP6Y-B215	MPE204	1
rain	MP6Y-B217	MPE204	1
Upper Joints 34x44x.5		MPE204	1
Spring	7.5/60x166	01317	1
eccentric	MP6Y-B207	MPE202	1
Housing complete with set pins.	MP6Y-N103	MPE108	1
Relief valve body	ST-K119	STK103	1
Relief valve oil collector	ST-K120	STK103	1
Relief valve spindle valve	ST-K121	STK103	1
Relief valve spring cap	ST-K122	STK.103	1
ring	2.1/7x28.5	0.1317	1
Upper joint 12 x 20 x 1.5		STK.103	1
Steel pipe 6.5 x 8.5		STK.103	1
<u>Valve Housing complete</u>			
<u>fittings.</u>			
<u>rising :-</u>			
Housing complete with studs & nuts	MP6X-B400	MPB402	1
Ulling up pin	MP6X-B405	MPB402	1
MP	MP6X-B408	MPB402	1
Upper joint for air inlet 38 x 48 x 1.5		MPB402	1
Upper joint for stuffing box 62.5 x 74.5 x .5		MPB402	1
Upper joint for sprayer 16 x 48 x 0.1		MPB402	1
Upper joint for Pulveriser 34 x 55 x 3		MPB402	1



PART.	DETAIL No.	DRG.No.	No. off.
er joint for Fuel Inlet 5 x 18 x 1.5		MPB402	1
ance piece	MP6Y-B406	MPB403	1
ring box	MP6Y-B407	MPB403	1
	MP6Y-B2509	MPB403	1
	P4Y-B.408	PB411	1
ng guide	P4Y-B409	PB411	1
izer	232 H.	PB409	1
yer	287 BR.	PB409	1
yer nut	287 BR.	PB409	1
<u>Engine Compressor Gaskets.</u>			
<u>Timing :-</u>			
suction valves	ST-F141	STF101	2
" "	ST-F141	STF101	3
" "	ST-F151	STF101	3
" "	ST-F151	STF101	7
discharge valves	ST-F141	STF101	2
" "	ST-F141	STF101	3
" "	ST-F151	STF101	3
" "	ST-F151	STF101	6
suction valve seats	ST-F349	STF306	1
" " "	ST-F357	STF307	3
" " "	ST-F347	STF306	3
" " "	ST-F356	STF307	7
discharge	ST-F541	STF502	1
" " "	ST-F553	STF502	3
" " "	ST-F541	STF502	3
" " "	ST-F553	STF502	6
piston rings 130 x 7.9 x 4			8
" " 415 x 10.9 x 12			4
" " 500 x 11.9 x 15			4
" " 560 x 12.9 x 16			3





PART	DETAIL No.	DRG. No.	No. OFF.
<u>Safety &amp; Compression Release Valves.</u>			
<u>Parts arising :-</u>			
Safety valve housing	MP6Y-B700	MPB704	1
Safety valve spring case	MP6Y-B723	MPB704	1
Upper joints for seats 34 x 44 x 0.5		MPB704	2
Ring for safety valve	11/32x200	0.1317	1
Safety valve spindle and pin	MP6Y-B720	MPB705	1
Safety valve	MP6Y-B721	MPB705	1
Safety valve seat	MP6Y-B722	MPB705	1
Safety valve spring cap	MP6Y-B724	MPB705	1
Compression release valve housing	P4Y-B700	PB700	1
Compression release valve spindle and nut.	P4B-B701	PB700	1
Compression release valve spring cap	P4B-B702	PB700	1
Compression release valve spring	3.1/20 x35	0.1317	1
<u>Air Valve for Injection Air Receiver.</u>			
<u>Parts arising :-</u>			
Seat	ST-K103	STK100	1
Valve	ST-K124	STK100	1
Lever	ST-K102	STK100	1
Ring	6.1/17x76.25.	0.1317	1
Pin	ST-K125	STK100	1
<u>Air Valve for Starting Air Receiver.</u>			
<u>Parts arising :-</u>			
Seat	ST-K100	STK100	1
Valve	ST-K124	STK100	1
Lever	ST-K102	STK100	1
Ring	4/17 x 79	0.1317	1
Pin	ST-K125	STK100	1



PART	DETAIL No.	Drg.No.	No. Off.
<u>Valve for L.P. Intercooler.</u>			
<u>QTY :-</u>			
	ST-K137	STK104	1
	ST-K138	STK104	1
	ST-K139	STK104	1
	6.1/32x126	0.1317	1
<u>Valve for 1st H.P. Intercooler.</u>			
<u>QTY :-</u>			
	ST-K137	STK104	1
	ST-K138	STK104	1
	ST-K139	STK104	1
	8/32 x 126	0.1317	1
<u>Valve for 2nd H.P. Intercooler.</u>			
<u>QTY :-</u>			
	ST-K146	STK100	1
	ST-K124	STK100	1
	ST-K102	STK100	1
	ST-K125	STK100	1
	4.9/17x79	0.1317	1
<u>Lubricating Oil Pump Spares.</u>			
<u>QTY :-</u>			
<u>State unit as follows :-</u>			
on valve seat	ST-G601	STG600	1
er suction valve seat	ST-G602	STG600	1
er washer for cap 9 x 23 x 1		STG600	1
ng handle	ST-G603	STG600	1
ng handle lock nut	ST-G604	STG600	1
arge valve spring cap	ST-G605	STG600	1
	ST-G606	STG600	1
ing nut for plunger	ST-G607	STG600	1
cap for plunger	ST-G609	STG600	1
ush	ST-G610	STG600	1
ry connection	ST-G611	STG600	1



PART.	DETAIL No.	DRG. No.	No. off.
Nuts for delivery connection	ST-6612	STG600	2
Delivery wire and washer	ST-6613	STG600	1
Sight glass	ST-6614	STG600	1
Leather washers 20x30 x 3		STG600	2
Pump body	ST-6627	STG600	1
Plunger	ST-6628	STG600	1
Bar cardboard joint	ST-6629	STG600	1
Injection & Delivery Valve balls $\frac{3}{8}$ "		STG600	2
Injection & delivery valve balls $\frac{1}{4}$ "		STG600	2
Delivery ball spring .67x5x13		STG600	1
Plunger spring	2.35/17x42	0.1317	1
In-return valve adaptor		Sketch	1
Upper joint		Sketch	1
In-return valve nipple		Sketch	1
Lock ring in nipple		Sketch	1
Oil		Sketch	1
Upper joint 10 x 14 X 2		Sketch	1
Coupling nut		Sketch	1





Part.	Detail No.	Drg.No.	No. off.
Scavenging pump valves.		P.1916	24
Cylinder cover studs.			10
Cylinder cover studs (special).			2
quantity of assorted bolts & Nuts.			
Fuel valve spindles.	MP6Y-B401.	MPB403	6
Fuel valve loose collars.	P4Y-B434.	PB409	2
Fuel valve spring guide.	P4Y-B409.	PB411	2
Fuel valve atomiser.	232M.	PB409	1
Fuel valve sprayers.	287BR.	PB409	6
Fuel valve sprayer nuts.	287BR.	PB409	6
Fuel valve stuffing box glands.	MP6Y-B2509.	MPB403	6
Engine bilge pump suction valves.	B6W-L104	PL163	1
Engine bilge pump discharge "	B6W-L104	PL163	1
Fuel pump suction valves.	MP6Y-E104.	MPB104	2
Fuel pump delivery valves.	MP6Y-E122	MPB104	2
Fuel pump delivery pipe non-return valves.	S6K-E103.	MPB404	1
Main engine piston rings 600 x 11.9 x 17			6
Main engine piston skirt rings 600 x 13.9 x 17.			3
Main engine piston rings 600 x 9.95 x 17.			6
Main engine piston rings Dares Duplex 600 x 11.9 x 17.			4
Main engine piston wearing rings.	MP6Y-A510.	B-6591A.	2
Withdrawing tool for Dares Duplex rings.			1
Scavenge pump piston rings 940 x 17.9 x 27.			1
M.E.piston rod stuffing box wearing rings.	MP6Y-A222.	MPA269.	6
M.E.piston rod stuffing box pressure rings.	MP6Y-A223.	MPA269.	3





Part.	Detail No.	Dwg. No.	No. off.
P.W.S.stuffing box packing rings.	MP6X-L577.	MPL521.	28
P.W.S.telescopic inlet pipes and flanges.	MP6X-L589.	MPL517.	2
Brass cones for valve on inj. air receiver.			2
Ebonite cones for valve on inj. air receiver.			4
Brass cones for $\frac{1}{2}$ " air valves.			2
Ebonite cones for $\frac{1}{4}$ " air valves.			30
Brass cones for $\frac{1}{4}$ " air valves.			2
10 ft.length of 114 o.d. L.P. disch.pipe.			1
Flange.	ST-B478.	STB700.	1
Flange.	ST-B477.	STB700.	1
Flange.	ST-B489.	STB700.	1
7 ft.length of 82 o.d. 1st. M.P.suction pipe.			1
Shoulders for 82 o.d. pipe.		Sketch.	2
10 ft.length of 78 o.d. 1st M.P.disch.pipe.			1
Shoulders for 78 o.d.pipe.		Sketch	2
7 ft.length of 67 o.d. 2nd M.P. suction pipe.			1
Shoulders for 67 o.d. pipe.		Sketch.	2
9 ft.length of 54 o.d. 2nd M.P. disch.pipe.			1
Shoulders for 54 o.d. pipe.		Sketch.	2
Nut for 48 o.d.pipe.	U.	Sketch.	1
Shoulder for 48 o.d.pipe.	U.	Sketch.	1
16'6"length of 48 o.d. inj.air pipe.			1
Coupling.	ST-C103.	STB503.	1
Coupling.	ST-C104.	STB503.	1





Part.	Detail No.	DwgNo.	No. off.
17 ft.length of 37 o.d.inject. air pipe.			1
Shoulders for 37 o.d.pipe.	Z.	Sketch.	4
Nuts for 37 o.d.pipe.	Z.	"	4
33 ft.of fuel pump delivery pipe.			
$\frac{3}{8}$ "valve balls for lubricating oil pump.		STG600	4
$\frac{1}{4}$ "valve balls for lubricating oil pump.		STG600	4
Sight glasses for lubricating oil pump.	ST-G614.	STG600	8
Gauge glasses for lubricating oil pump.	ST-H421	STG600	2
Pressure gauge graduated 0-50.	L.104.	Sketch	1
Pressure " " 0-100.	H.100.	"	1
Pressure " " 0-20.	G.103.	"	1
Pressure " " 0-5.	K.102.	"	1
Pressure " " 0-0.5	S.104.	"	1

Springs for :-

Cylinder lub.delivery valve.	0.67/5x 13.	0.1317.	3
P.W.S.wiper ring.	0.75/4.5.	0.1317.	1
P.W.S.inlet packing.	0.75/4.5.	0.1317.	28.
Non-return valve for P.W.S. lubricator.	0.9/4.5x12.	0.1317.	1
Non-return valve for fuel inlet at fuel valve.	1.4/4.5x20.	0.1317.	1
Fuel pump suction valve.	1.8/15.5x34.	0.1317.	6
Inspection doors.	1.8/16x30.	0.1317.	1
Fuel pump discharge valve.	2/5.5 x 36.	0.1317.	6
Fuel pump safety valves.	2.1/7x28.5.	0.1317.	2
Starting valve.	2.1/14x128.	0.1317.	1.
Cyl.lub.pump plunger.	2.35/17x42.	0.1317.	5



Part.	Detail No.	Drg.No.	No. off.
Pilot starting valve.	2.5/14x30.	0.1317.	1
Suction valve for H.P.air pump.	2.5/45.5x62.5	0.1317.	3
Suction valve for 2nd H.P.air pump.	2.5/45.5x62.5	0.1317.	4
Suction valve for 1st H.P.air pump.	2.75/64.5x67.	0.1317.	3
Suction valve for L.P.air pump.	2.75/64.5x67.	0.1317.	4
Compression release valve.	3.1/20x35.	0.1317.	1
Coupling pins fuel pump drive.	3.4/14.6x88.	0.1317.	1
Delivery valve L.P.air pump.	3.4/64.5x86.	0.1317.	4
Delivery valve 1st H.P.air pump.	3.4/64.5x86.	0.1317.	4
Delivery valve 2nd H.P.air pump.	4.15/45.5x38.	0.1317.	4
Delivery valve H.P.air pump.	4.15/45.5x38.	0.1317.	4
Injection air shut off valve.	4.55/21x113.	0.1317.	1
2nd H.P.intercooler air space safety valve.	4.9/17x79.	0.1317.	1
Bilge pump disch.valves.	5/32x69.4.	0.1317.	3
Bilge pump suction valves.	5/32x69.4.	0.1317.	3
Injection air control valve.	5.1/28x85.	0.1317.	1
Intercooler, water space safety valve, bilge pump, escape valve.	6.1/28x99.	0.1317.	1
L.P.intercooler air space safety valve.	6.1/32x126.	0.1317.	1
Escape valve for slide valve housing.	7/32 x 131.	0.1317.	1
Scavenge pipe door.	7.5/23x90.	0.1317.	1
Master starting valve.	7.5/48x180.	0.1317.	1
Fuel pump plungers.	7.5/60x166.	0.1317.	1
1st H.P.intercooler air space safety valve.	8/32 x 128.	0.1317.	1
Starting air valve piston.	9/48 x 418.	0.1317.	1
Main engine governor.	10/67 x 200.	0.1317.	1
Main engine cyl.safety valves.	11/32 x 200.	0.1317.	1
Starting air valve piston.	13/73 x 430.	0.1317.	1



Part.	Detail No.	Drg.No.	No. off.
Main engine fuel valve.	16/64 x 289.	0.1317.	1
Manoeuvring gear lever.	1.0/10.5x74.	0.1317.	1
Regulating valves.	1.6/14x37.	0.1317.	1
Regulating valve tappets.	2.1/18x48.	0.1317.	1
Safety valve for starting air valve box.	4/17x 79.	0.1317.	1
Injection air bottle safety valve.	6.1/17x76.25.	0.1317.	1
Packing rings for L.P.comp. stuffing box.	1.2/7.1x261.2.	0.1317.	1
Packing rings for scav.pump stuffing box.	1.4/8.6x365.	0.1317.	1
Indicator gear.	1.8/25x90.	0.1317.	1
Fuel valve levers.	3.1/14x128.	0.1317.	1
Indicator gear.	4/18 x 108.	0.1317.	1
Release valve operating gear.	6.6/36x320.	0.1317.	1
Scav.pump sust.& delivery valves.	0.9/15.2x32.	0.1317.	24
Bilge pump shifting valve.	0.5/6.8x 27.	0.1317.	1
Starting air valve operating gear.	3.25/20x157.	0.1317.	1

One complete set of rubber rings  
Comprising:-

Bottom of cylinder liner, 640 x 7.	MP6Y-A210.	MPA.233.	6
Bottom of cylinder liner 650 x 7.	"	"	6
Middle of cylinder liner 755 x 7.	"	"	12
Top of cylinder liner 765 x 7.	"	"	6
Top of cylinder liner 25 x 7 x 7 sq.	"	"	72
Top of cylinder cover 740 x 7.	MP6Y-B100.	MPB.104.	12
Bottom cylinder cover 280 x 7.	MP6Y-B110.	MPB.105.	24
Casing for fuel valve top 135 x 5.	MP6Y-B.102.	MPB.106.	6
Casing for fuel valve bottom 98 x 5.	"	"	6



Part.	Detail No.	Dwg. No.	No. off.
Piston cooling pipes in piston rod 65 x 5.	MP6Y-A210.	MPA907.	30
Piston rod flange, 210 x 7.	MP6Y-A915	MPA908.	12
Piston rod flange 238 o.d. 31 i.d. x 1.	MP6Y-A210.	MPA907.	6
Piston rod flange 230 x 7.		MPA907.	6
Piston cooling inlet to and outlet from piston rod 30 x 5.		MPL515.	36
P.W.S. outer pipes top and bottom, 60 x 5.	MP6Y-L556.	MPL516.	72
P.W.S. internal pipe 75 x 5.	MP6Y-L569.	"	12
P.W.S. inlet & outlet tubes 60 x 5.		MPL517.	24
P.W.S. stuffing box 68 x 5.	MP6Y-L571.	MPL521.	12
P.W.S. stuffing box housing 95 x 5.	MP6Y-L578.	"	12
P.W.S. stuffing box gland rings 100 x 5.		MPL522.	18
L.P. air pump cylinder jacket 700 x 7.	MP6Y-F100.	MPF108.	4
L.P. air pump cylinder bottom 880 x 5.	"	"	1
L.P. air pump cylinder top 38 x 7 x 7 sq.	"	"	7
H.P. air pump liner 175 x 5.	MP6Y-F117.	MPF115.	1
1st H.P. air pump cover 50 x 7 x 7 sq.	MP6Y-F301.	MPF301.	6
Water inlet for 1st H.P. cooler 95 x 5.	MP6Y-F733.	MPF716.	1
Water inlet for 2nd H.P. "	MP6Y-F740	MPF719.	1
Water inlet for L.P. "	MP6Y-F753.	MPF724.	1
Water inlet for H.P. "	MP6Y-F763.	MPF729.	1
H.P. cooler bottom gland 60 x 7.	P6Y -F1729.	MPF730.	1
Cooler bottom glands 100 x 7.	P6Y -F1713.	PF.780.	3
L.P. compressor jacket drain & water inlet to comp. 45 x 5.		MPL318.	1





Part.	Detail No.	Dwg. No.	No. off.
Scavenge pump valve seats 238 x 5.	MP6Y-H206.	MPH211.	48
Scavenge pipes 650 x 7.	MP6Y-H600.	MPH602.	5
Scavenge pipe distance piece 650 x 7.	MP6Y-H609.	MPH606.	1
Starting air valve cover 30 x 5.	MP6Y-G1348.	MPG342.	2
Air pump cylinder 700 x 7.	MP6Y-F102.	MPF118.	2

AN ASSORTMENT OF COPPER, FIBRE, COPPER ASBESTOS & KLINGBRIT  
WASHERS COMPRISING:-

(a) Copper Washers.

<u>Outside dia.</u>	<u>Inside dia.</u>	<u>Thickness.</u>	<u>No. off.</u>
18	7.5	1.5	3
20	12	1.5	1
20	7	1.5	12
27	22	1.5	9
27	14	1.5	1
28	18	0.5	8
31	20	1.0	1
38	31	1.5	6
38	31	0.5	2
44	34	1.5	6
44	34	0.5	6
48	38	1.5	3
48	16	0.3	3
55	34	3.0	3
59	51.5	0.5	3
62	53	1.5	4
72	62	1.5	4
74.5	62.5	0.5	3
79.5	74.5	0.5	8
95	80.5	1.5	3
92.5	92.5	0.5	16
205	181	1.0	1



Outside diar.    Inside diar.    Thickness.    No.off.

689                      633                      1.0                      6

(b) Fibre Washers.

14	10	2	12
18	14	2	12
20	12	2	12
20	15	2	12
23.5	18	2	12
27	22	2	12
29	23.5	2	12
34	27	2	12
34	23.5	2	10
38	31	2	6
40	26	2	2
40	34	2	6
43	24	2	7
44	34	2	12
48	38	2	3
50	43	2	10
53	43	2	1
53	44	2	12
55.5	48	2	1
62	53	2	10
62.5	53	2	4
64	23	2	7
70.5	62.5	2	2
126	90	2	3
179.5	152	2	2
195	150	2	1
234	218	2	1
242	216	2	2





<u>Outside diar.</u>	<u>Inside diar.</u>	<u>Thickness.</u>	<u>No. off.</u>
----------------------	---------------------	-------------------	-----------------

252	236	2	1
-----	-----	---	---

(c) Copper Asbestos Washers.

89	71	2	8
98	65	2	1
109	91	2	9

(d) Klingerit Washers.

37	24	1	12
----	----	---	----

Special Packing:-

7 lbs. Fibrous metallic for fuel valves.



© 2021

Lloyd's Register  
Foundation

010478-010483-006213/18