

SPECIFICATION OF NORMAL SPARE PARTS FOR ENGINES P4K Nos. 50073 AND 50074
TO BE INSTALLED IN TWIN-SCREW VESSEL. /INCLUDING TOTAL REQUIRED FOR BOTH
ENGINES.

- | | | | |
|--|---|----------------------------------|----------|
| 8 | Fuel Needle Valves | <i>only 6 to be installed</i> | |
| 8 | Nuts for -do- | | |
| 4 | Needle Guides | <i>only 4 to be installed</i> | |
| 2 | Atomizers | | X |
| 8 | Sprayers | | X |
| 8 | Sprayer Nuts | <i>only 6 to be installed</i> | X |
| 2 | Needle Valve Stuffing Boxes | | X |
| 8 | Glands for -do- | | X |
| 6 | Suction and Delivery Valves for L.P. compressor | | X |
| 4 | -do- | H.P. | X |
| 4 | -do- | water pump | X |
| /The cooling-water and bilge pumps have two valves each, exactly similar./ | | | |
| 4 | Washers for same | | X |
| 2 | Suction Valves for Fuel oil pump | | X |
| 2 | Delivery Valves for -do- | | X |
| 4 | Valves for waste oil pump | | X |
| 2 | Relief Valves for working cylinder | | X |
| 2 | Safety Valves for injection air receiver | | X |
| 2 | -do- | air coolers | X |
| 2 | -do- | working cylinder /cone and seat/ | X |
| 2 | Brass Cones for valve on injection air receiver | | X |
| 20 | Ebonite Cones for small air valves | | X |
| 2 | -do- | valve on starting air receiver | X |
| 2 | -do- | -do- | X |
| 10 | Piston Rings for working piston /Each piston has 5 rings/ | | X |
| 2 | -do- | manoeuvring " | -do- 2 " |
| 4 | -do- | L.P. compressor " | -do- 4 " |
| 14 | -do- | H.P. " " | -do- 7 " |
| 2 | -do- | reversing air piston valve | X |
| 2 | Screws for H.P. compressor piston | | X |
| 4 | Telescopic Pipes for working cylinder top end lubricator | | X |

© 2020



Lloyd's Register
 Foundation

11196650044 1/2

- 2 Telescopic Pipes for manoeuvring cylinder top end lubricator
 - 4 Sockets for -do-
 - 8 Washers for -do-
 - 2 Spring Supports for -do-
 - 8 Piston Top Centres
 - 2 Top End Brasses for working cylinder
 - 4 Glass Air Vessels for fuel oil pump
 - 40 Sight Glasses for lubricating oil pumps
 - 2 Lubricating-oil Pumps, complete
 - 12 Ball Valves for -do-
 - 12 -do- -do-
 - 8 Diaphragms for automatic air valve
 - 2 Catches for turning gear
 - 5 Metres Injection Air Pipe
 - 12 Washers for -do-
 - 8 Air Pipes- necessary when using the spare compressor on the engines.
- Various Springs, /2 of each kind used/
Various Packings.

25 NOV 1919

A.-B. ATLAS DIESEL
AVD. DIESELS MOTORER
STOCKHOLM



© 2020

Lloyd's Register
Foundation

1066-0044^{2/2}