

LIST OF SPARE PARTS. 735D.MAIN ENGINE:

- 1 Pair connecting rod lower end bolts.
 1 Pair connecting rod upper end bolts.
 4 Main bearing bolts and nuts.
 1 Piston (no rings fitted).
 2 Sets piston rings.
 1 Cylinder head complete with liners and water jacket but without valves.
 1 Set of studs and nuts for cylinder head valves.
 2 Inlet valves with casings, springs, etc. complete.
 4 Exhaust valves with casings, springs, etc. complete.
 4 Exhaust Valve adjusting screws.
 3 Exhaust valve box seating rings.
 3 Exhaust valve spindle seating rings.
 2 Starting valves with casings, springs, etc. complete. with adjusting screws.
 1 Starting valve Spindle.
 2 Fuel valves with casings, springs, etc. complete.
 3 Fuel valve spindles.
 1 Fuel valve body adjustable end (end only.).
 1 Fuel valve sleeve.
 2 Cylinder relief valves complete.
 1 Roller of each size with pins.
 1 Set air compressor valves complete.
 2 Cages of each kind for compressor valves (for main, Auxiliary M.P. and L.P. suction and delivery).
 12 Elastic discs for air compressor valves.
 6 H.P. air compressor valve springs.
 6 M.P. " " " "
 6 L.P. " " " "
 1 Safety valve for air compressor .
 1 Chain of each size fitted on main and auxy. engines.
 6 Chain links of each size fitted, for readily repairing chains.
- 1 Set piston rings for air compressor.
 1 Set piston rings for H.P. air compressor additional.
 1 Pair lower end air compressor connecting rod bolts.
 1 Complete set of springs for one engine.
 6 Additional springs for exhaust valves.
 1 Set of packing for fuel pump.
 1/2" Set of Metallic packing for one engine.
 4 lbs. of Wains' packing.
 3 lbs. 1/4" Palmetto packing.
 2 lbs. Asbestos cord.
 2 Sheets of 1/32", 1/16" thick permanite jointings. 4'0" X 4'0".
 2 Sheets of 1/8" asbestos millboard, 4'0" X 4'0".
 1 Set of inlet pipes and fittings for piston cooling gear. complete with all nuts and flanges, etc. fitted.
 3 Sets of wearing parts for piston cooling gear.
 1 Cooling coil for H.P. air compressor complete with flanges.
 6 M.P. cooler tubes.
 6 L.P. " "
 1 Set expanders for compr. cooler tubes.
 1 Length fuel pump delivery pipe.
 1 " " valve blast air pipe.
 1 " delivery pipe from air compressor to blast air bottle.
 6 Fuel oil pump plungers.
 1 Complete set of working parts for one fuel pump plunger.
 A quantity of assorted bolts and nuts.
 6 Rubber rings of each size for main cylinder liners.
 6 " " " " " cylinder valves.
 3 " " for compr. hood.

