


Ex German Steamer "Aarnes".

Rough sketch showing position of Stay tubes in relation to furnaces.

No longitudinal stays fitted between furnace front and Rear Tube plates.

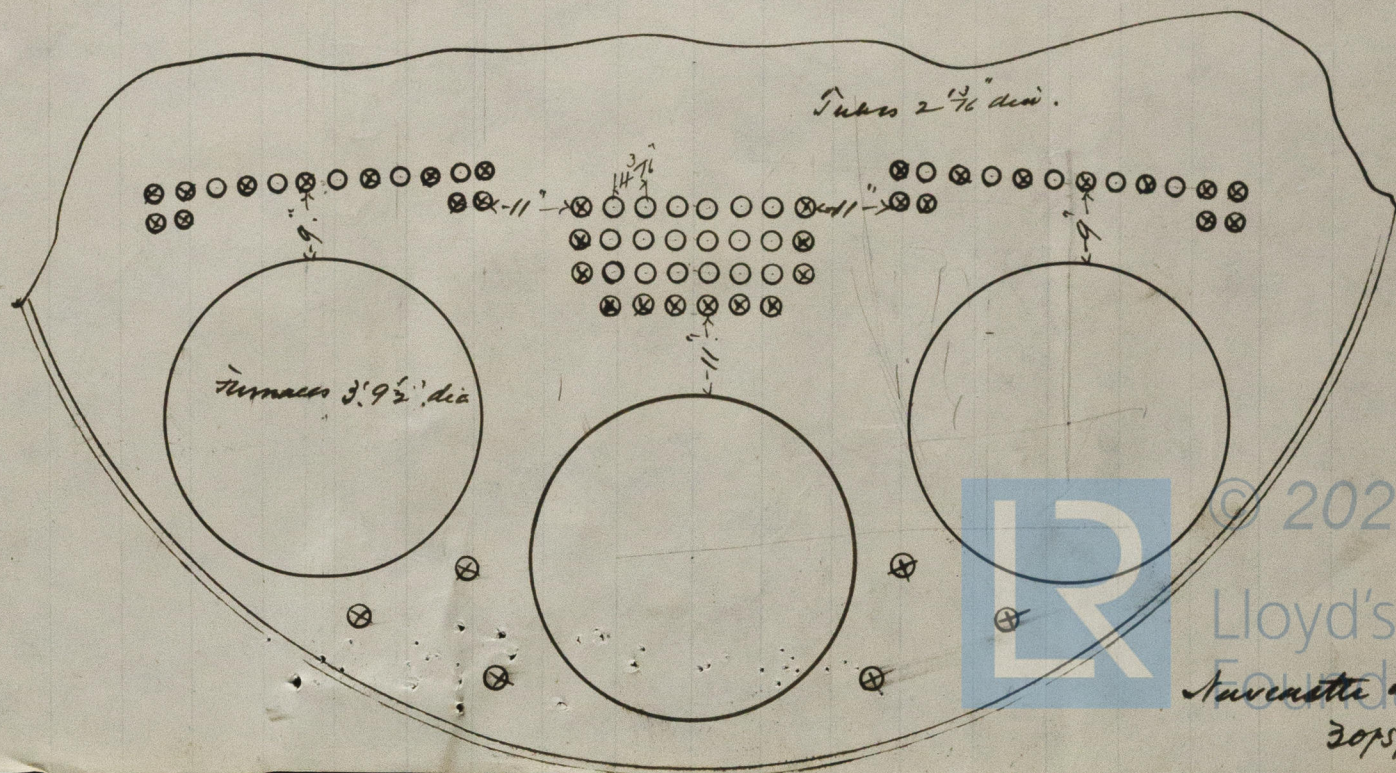

© 2020

Lloyd's Register

Foundation

2015721

W48-0217